




HP dv5-1125nr RAM Replacement

This guide will show you how to access the RAM.

Written By: Nick Loey

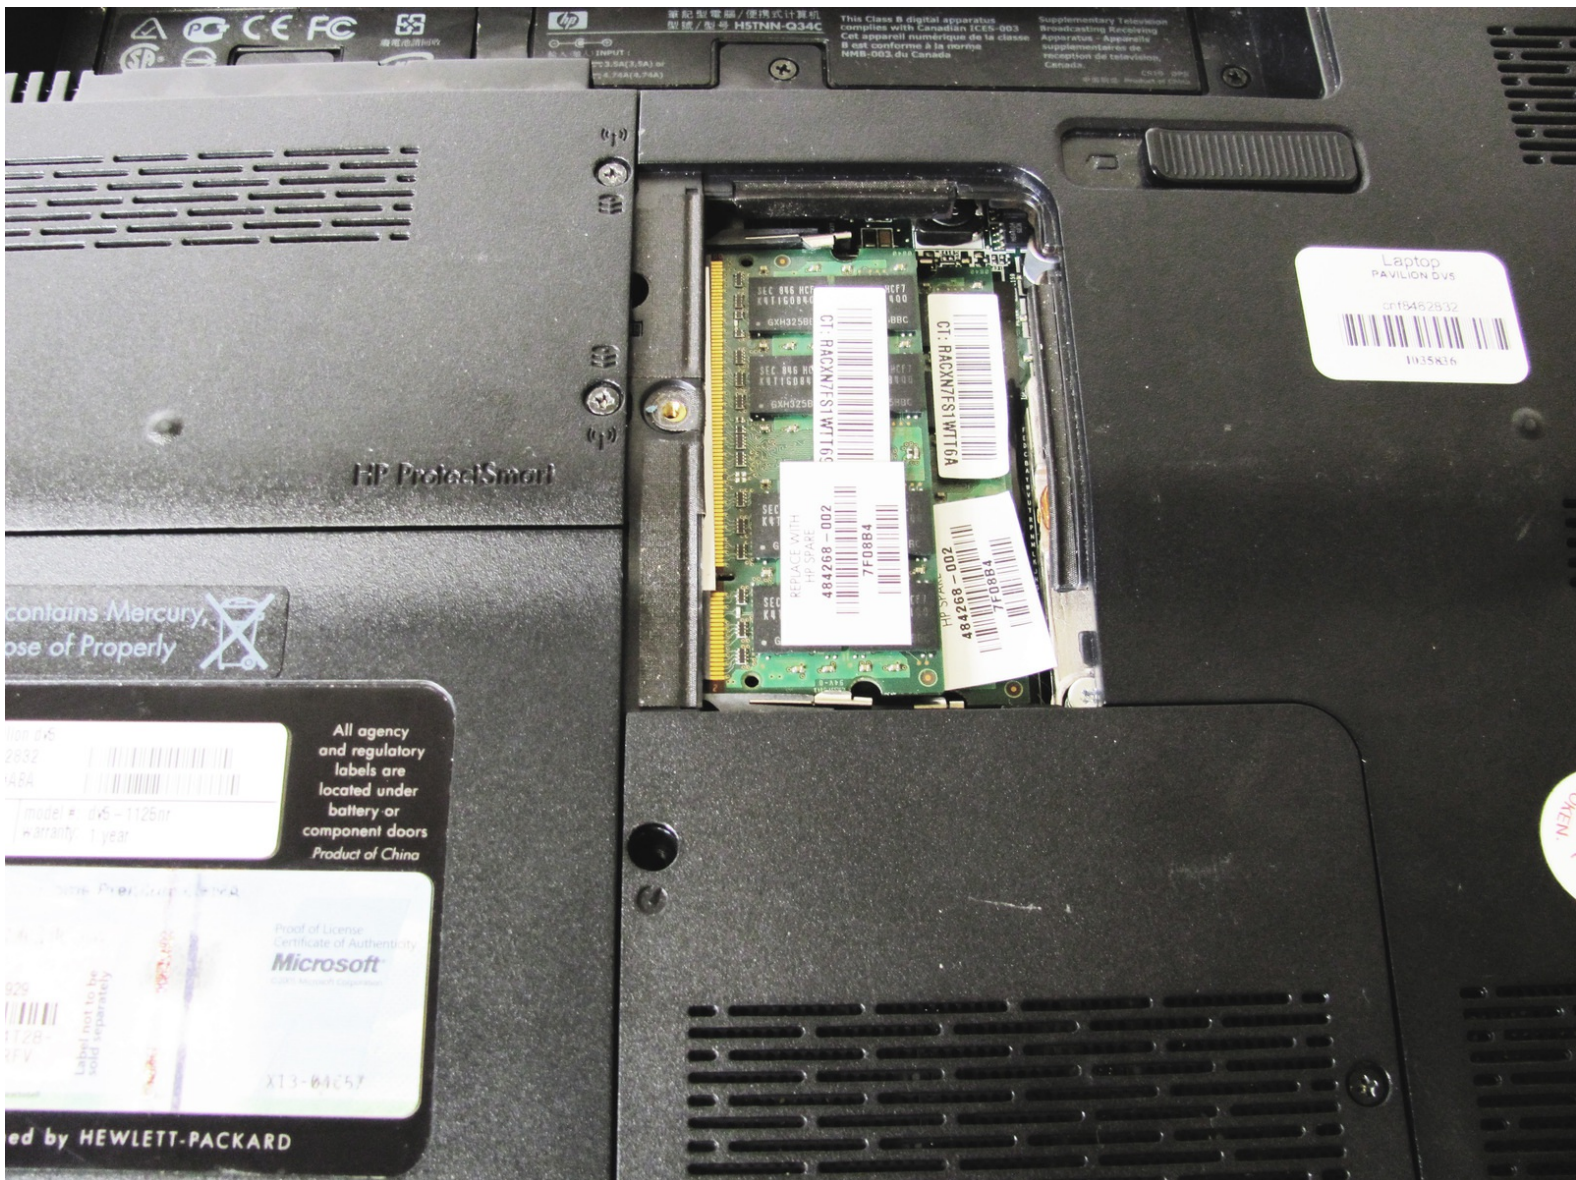

INTRODUCTION

Many laptop issues trace back to a faulty RAM card. Luckily your memory is fairly easy to replace, just follow this guide!



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Ensure your computer is shut down.
- ⚠ Removing the battery while the laptop is still on may corrupt your files.
- Remove any power adapters and cords connected to the laptop body.
- Turn the computer over so the bottom is facing up.
- ⓘ These pictures show no battery, but your battery should still be in your computer at this point.

Step 2

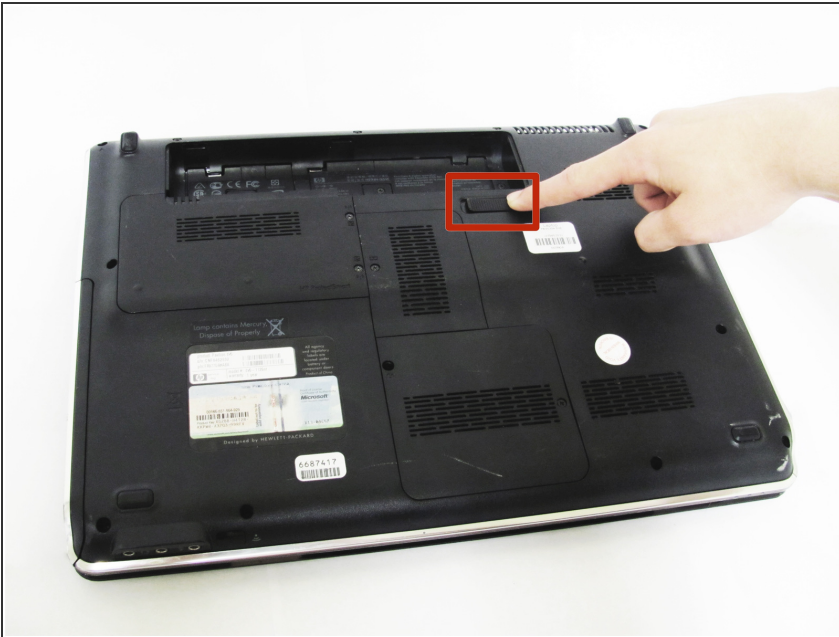

- The battery release is below the bottom right corner of the battery bay.
- Slide the switch to the right until the release clicks.

Step 3



- Remove the battery.


i The release switch may need to be held down while removing the battery.

Step 4 — RAM





- Remove the one 4mm Phillips screw from the RAM cover using a Phillips #00 screwdriver.

Step 5

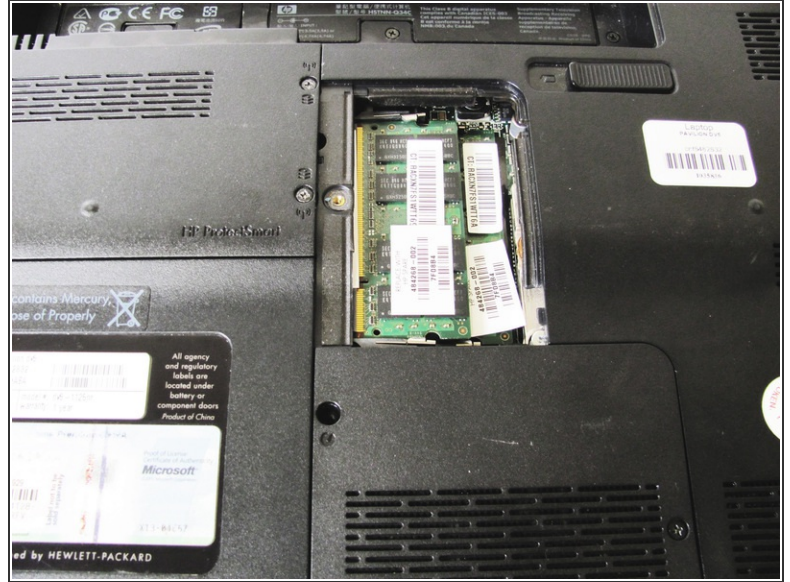

- Remove the RAM cover to reveal the module's underneath.

Step 6

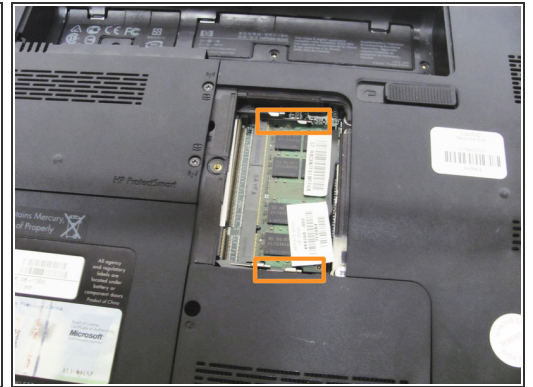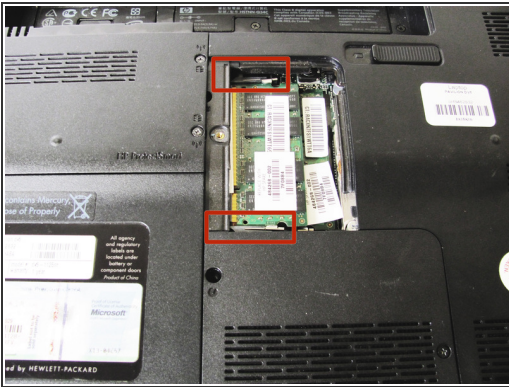

⚠ Make sure to ground yourself before touching the RAM modules; they are very sensitive to static electricity.

- Push the two metal tabs on the side of the RAM module outwards, towards the battery and CMOS compartments (up and down).
- Once the module is released, gently pull the module upwards.
- Repeat for the RAM module underneath the first one.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 04:12:21 AM.